

AIR COMPRESSOR

Operating manual



TRANSLATION OF THE ORIGINAL USER MANUAL

Manufacturer / distributor:

VacuumChambers.eu
 drControl Dawid Roszczenko
 Jodłowa 3A/34
 16-001 Ignatki-Osiedle
 Poland
 E-mail: shop@vacuumchambers.eu; Tel.: +48535312207



BEFORE USING, PLEASE READ THIS OPERATING MANUAL. Keep the manual for possible future use, as it may always be necessary to remember the information contained in the manual, and it must be provided with the device in the event of reselling the machine or changing the user.



WARNING! In order to avoid the risk of injuries and accidents, as well as to increase work efficiency and prevent premature failure of the device, read all warnings, safety instructions and paragraphs marked with the symbol: ⚠



Do not dispose of that product as unsorted municipal waste. Used equipment should be sent to an electro-waste collection point.



firma przyjazna naturze® Nature friendly company.

All photos used in this manual are illustrative photos. The appearance and quantity of the elements supplied to the customer, as well as their mutual location may vary depending on the ordered vacuum piston pump.

This operating manual is based on current knowledge and experience. The manufacturer reserves the right to change the content of this manual without informing the consumer.

Contents

1. Range of applications.....	3
2. Properties of the air compressor.....	3
A. Outlet pressure regulation.....	4
3. User manual.....	5
4. Notes about use.....	5
5. WARNING! Safety Instructions.....	6
6. Maintenance.....	7
A. Cleaning the exhaust air filter.....	7
B. Cleaning and replacing the muffler filter.....	8
C. Safety valve.....	8
7. Warranty.....	8
8. EC declaration of conformity.....	9

1. Range of applications.

Oil-free piston compressors offered by VacuumChambers.eu are characterized by low noise level, low energy consumption and safety. They are also characterized by a long service life and high reliability. The oil-free technology allows the compressor to work wherever contamination of the compressed air with oil particles is unacceptable. As a result, these devices can be widely used in medical equipment, sanitation, food industry and research. These devices will work both in small workshops and for home use. They can also be used to clean items with compressed air, inflate wheels, power pneumatic tools, aerate water, etc.

The compressor in a set with a pressure chamber is used in the process of casting details from moulding products such as silicone, resin (polyurethane, polyester, epoxy), plaster, wax. The overpressure generated by the compressor eliminates air bubbles present in the flooding materials. Suitable pressure chambers for such applications are offered by VacuumChambers.eu.

The compressors described in this manual can produce a maximum relative pressure of 115 psi (8 bar). This value can be reduced according to the technological requirements of the specific process.

The compressor should be operated in the following conditions: ambient temperature from + 5°C to + 40°C, air humidity up to 80% at 20°C.

The compressor should be stored and transported in the following conditions: ambient temperature from -15°C to + 50°C, air humidity up to 95% without condensation of water vapour.

2. Properties of the air compressor.

Air compressor consist of:

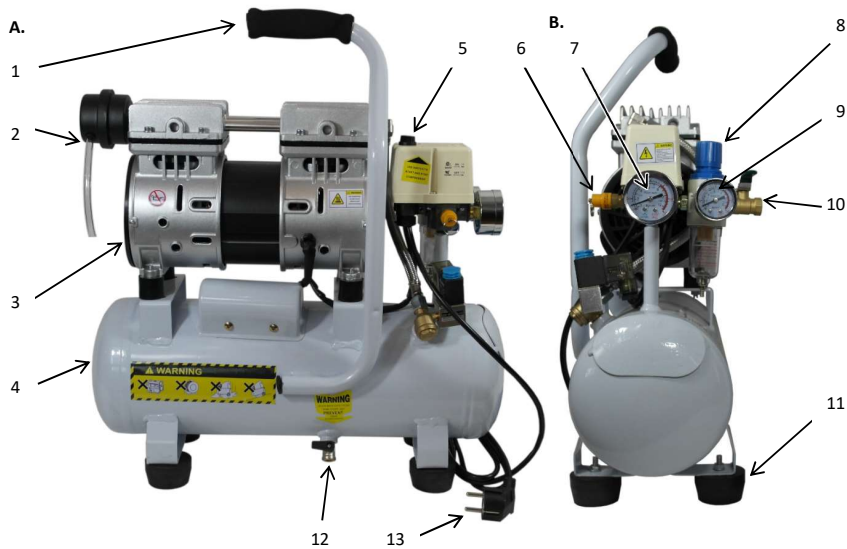


Photo 1: Compressor (A-side view, B-front view).

- | | |
|------------------------------|--|
| 1. Handle. | 8. Pressure regulator. |
| 2. Air intake with silencer. | 9. Air exhaust filter with pressure reducer and reducer manometer. |
| 3. Piston pump. | 10. Outlet valve. |
| 4. Pressure tank. | 11. Legs. |
| 5. Switch. | 12. Drain valve. |
| 6. Safety valve. | 13. Power cord. |
| 7. Tank manometer. | |

The compressor (Photo 1) consists of an oil-free piston pump (3) and a pressure tank (4). The pump has an air intake equipped with a silencer with a filter (2) and is firmly mounted on the tank. The pump and the tank are connected by a reinforced pressure hose to a solenoid valve. The tank is equipped with a handle (1), legs (11) and a drain valve (12). A pressure regulator (8) and an

exhaust air filter with a pressure reducer and reducer manometer (9) are mounted on the tank. The compressor switch (5) is located on the pressure regulator. The power cord (13) is also connected to the pressure regulator. Additionally, the compressor has a tank manometer (7), a safety valve (6) and an outlet valve (10). Power tools or pneumatic hoses can be connected to the compressor's outlet valve. Outlet valve can be closed, which allows to maintain the generated pressure in the compressor, and facilitates the operation of elements connected to the compressor.

During operation, the piston pump draws air from the outside, increases its pressure and forces it into the pressure tank. The pressure tank collects the compressed air and allows the pressure generated by the pump to be maintained, even after it stops working. The pressure regulator controls the pressure inside the tank by repeatedly starting and stopping the piston pump. The pump will run when relative pressure in the tank is 70 Psi (5 bar) or lower. After starting the pump, the air is compressed until the pressure reaches the value of 8 bar, then the controller switches the pump off by solenoid valve. The pump start and stop values are factory set and marked on the controller housing. The pressure inside the tank is constantly monitored and when it drops below 5 bar, the pump will be restarted. As a result, the pressure in the tank is kept constant - in the range between 5 and 8 bar relative pressure.

The maximum relative pressure inside the compressor may be 0.8 MPa (8 bar) - this value is given on the compressor nameplate. The compressor is equipped with a safety valve that prevents the pressure inside the compressor from rising above this value.

Two manometers are provided to monitor and control the pressure in the pressure vessel and on the outlet valve. The tank manometer, located below the pressure regulator, shows the pressure inside the tank. The reducer manometer, located on the air filter, shows the pressure value at the tank outlet valve.

A. Outlet pressure regulation.

The relative pressure inside the compressor's tank is kept constant - between 5 and 8 bar. The pressure at the outlet valve can be lowered by using the blue pressure reducer located on the exhaust air filter (Photo 2).

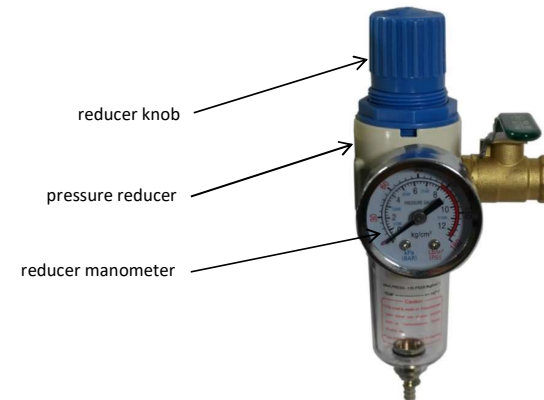


Photo 2: Air exhaust filter with pressure reducer and reducer manometer.

To reduce the pressure on the outlet valve, first unlock the regulator knob by gently pulling it upwards. Then the pressure can be regulated by turning the knob. Turning the knob clockwise will increase the pressure at the compressor outlet valve. Turning the knob in opposite direction will reduce the pressure at the compressor outlet valve. The value of the set pressure is indicated on the reducer manometer, located on the outlet air filter. The setting of the reducer can be locked by gently pressing on the reducer knob.

The relative pressure set in the reducer depends on the pressure in the tank at the moment. If the knob is turned in the direction of increasing the pressure, but the pressure on the reducer manometer does not increase, it means that the value indicated on the reducer manometer corresponds to the current value of the pressure in the tank, and it is not possible to reach higher pressure on the outlet valve at the moment. If the knob is turned in the direction of pressure reduction, but the pressure indication in the reducer manometer does not decrease, it means that it is not possible to reduce the pressure to a lower value at the moment.

The piston pump starts when the pressure drops below a starting value of 5 bar relative pressure. Consequently, if for the intended process it is required to increase the pressure, which is at the moment higher than the starting pressure value (e.g. the process requires a relative pressure of 7 bar, and the current pressure in the tank is 6 bar relative pressure), it is necessary to lower the pressure to a value below 5 bar. This will start the pump, and then increase the pressure to a maximum value of 8 bar.

Pressure can be reduced by opening the compressor outlet valve (positioning the valve handle parallel to the valve). Remember to close the valve (position the handle perpendicular to the valve). Leaving the outlet valve open may impossible to overpressure build-up and cause the pump overheating.

3. User manual.

- 1) Make sure the switch is in the "OFF" position before connecting the compressor to the power supply.
- 2) Close the outlet valve (place the valve handle perpendicular to the valve)
- 3) Connect the compressor's power cord to the mains supply.
- 4) Start the compressor by setting the switch to the "ON" position.
- 5) If the relative pressure in the tank is lower than 5 bar, the piston pump will automatically start, and stop when the pressure in the tank will increase to 8 bar relative pressure.
- 6) If the relative pressure in the tank is higher than 5 bar, the pump will not start.
- 7) The pressure in the tank can be controlled on the tank manometer, which is located below the pressure regulator. When the compressor is on, and the pump is stopped, the pressure gauge should show a value between 5 and 8 bar relative pressure.
- 8) Check the pressure at the tank outlet valve. It is indicated on the reducer manometer.
- 9) If change of pressure on the tank outlet valve is required:
 - a. Gently lift the blue reducer knob.
 - b. Set the pressure on the outlet valve by turning the knob clockwise to increase it, or anticlockwise to reduce it. The range of pressure values that can be achieved on the regulator is limited and is described in section 2. A. „Outlet pressure regulation.“ of this manual.
 - c. After the intended pressure value has been set, press the reducer knob slightly downwards to lock the settings.
- 10) Connect with compressor outlet valve the components with which compressor is to cooperate. Follow the operating manual of those components.
- 11) Open and close the compressor outlet valve as required by the process.
 - a. To open the valve and to release the compressed air stream, position the valve handle parallel to the valve.
 - b. To close the valve and block the compressed air flow, position the outlet valve handle perpendicular to the valve. The outlet valve can be closed at any time.
- 12) Before removing any components attached to the outlet valve, always close the outlet valve by positioning the valve handle perpendicular to the valve.
- 13) Before connecting new component to the compressor outlet valve, first close the outlet valve by positioning the valve handle perpendicular to the valve. Disconnect the component connected on the outlet valve and then connect the new component. Follow the components operating manuals.
- 14) After finishing work, close the compressor outlet valve by positioning the valve handle perpendicular to the valve.
- 15) Turn the compressor switch to the "OFF" position.
- 16) Disconnect the compressor from the power supply.

4. Notes about use.

- The compressor should stand on its feet on a level and stable surface, in a dry, clean, dust-free and well-ventilated place. The distance of the compressor side surfaces from other objects should not be less than 5 cm. The distance of the front and back of the compressor from other objects should not be less than 10cm. It is necessary to provide free air inlet to the device from the pump fan side, and to allow free air intake through the air intake with a silencer.
- Do not allow the compressor pump to overheat. Exceeding the temperature of 100°C on the motor housing significantly shortens the life of the pump, and in some cases may lead to its complete damage.
- If the compressor will not be used for a long period of time, release the compressed air from the tank, cover the compressor, and then put it in a dry and safe place.
- The compressor works without oil. The compressor must not be filled with oil or lubricated, as this may damage the compressor.
- To protect the inside of the tank from corrosion, open the bottom drain valve daily to remove moisture and water that may have accumulated in the tank due to air compression.

- If it is not possible to achieve a pressure value as declared by the distributor, this may indicate a leak in the system. Make sure that all compressor components are tightly connected and work properly. Close the outlet valve (position valve handle perpendicular to the valve) when checking the compressor for leaks.
- If the compressor pump does not start, reduce the pressure in the tank below 4 bar relative pressure.
- The compressor is intended to be used only as a source of compressed air. Its use for other purposes is prohibited.
- If the safety valve has been activated, check if the rated value in the tank is not exceeded during operation of the device.
- The compressor pump is an oil-free piston pump, therefore it is not designed to continuous work. Continuous operation of the pump may cause it to overheat. In this case, the pump will be automatically turned off. It will be possible for the pump to resume operation after it has cooled down. This should happen after about 15 minutes of break.
- When the power cord is connected to the power supply, the switch is in the "ON" position and the relative pressure in the tank is less than 5 bar, the pump starts automatically without any warning.
- When the pump is turning off, air is blown out of the solenoid valve.

5. WARNING! Safety Instructions.



- Read the operating instructions before use.
- There are warning decals on the compressor pump and the pressure tank, read them before starting work and follow them.
- Before each use of the air compressor, it is necessary to check its technical condition, in particular the supply cable.

- In the event of unusual sounds, exclude compressor from use - possible damage to internal components. Perform servicing and maintenance of the air compressor periodically.
- Carry out all maintenance work when the compressor pump is not hot and air compressor is not running, and is disconnected from the power supply.
- The general rules for the use of equipment working under voltage must be observed.
- Before starting work, make sure that the parameters of the power source correspond to the air compressor requirements specified on the compressor pump.
- Make sure that the air compressor complies with the technological requirements, processes and purposes for which it is to be used. Make sure that the air compressor is not exposed to chemicals that could damage it. The customer is solely responsible for selecting the appropriate air compressor for the working conditions.
- Make sure that the components, with which the compressor will cooperate are suitable for the pressure generated by the compressor and are in good condition.
- Do not compress flammable, explosive and toxic gases. It also cannot operate in the environment in which such gases are found.
- The temperature of compressed gases should not be higher than + 70°C.
- A pressure value of 8 bar must not be exceeded. It is not allowed to make any changes to the safety valve.
- Use the air compressor in a safe, well-ventilated place, on a flat, stable surface.
- The compressor is not intended for use in a potentially explosive atmosphere and is not protected with high voltage resistant insulation.
- Avoid excessive pollution of the working environment by dust, powders, small solids or water, as heavy contamination can damage the air compressor.
- Depressurize the pressure tank prior to transport and storage.
- Do not expose the device to rain or excessive moisture.
- Some parts of the compressor pump get very hot during operation. To prevent burns, never touch the body and pump motor.
- Never place in close proximity to the compressor objects flammable, explosive, and susceptible to high temperature.
- Do not repair the compressor by yourself.
- It is not allowed to modify the compressor's factory settings.
- Wear hearing protection in case of prolonged use of the compressor.
- Never put fingers or other objects inside the pump impeller cover. Keep your hair, clothing, gloves and other objects that could get into the impeller, away from moving parts.
- Do not subject any parts of the human body to overpressure.
- Do not direct the pressure hose or the compressed air jet towards people or animals.



- The device should be operated by trained technicians, mentally and physically able to operate the air compressor.
- Keep children and animals away from operating area of the device.
- Be foreseeable, watch what you are doing, and be reasonable when using the device. Do not use the device when you are tired or under the influence of drugs, alcohol or medication.
- Do not use the device or any of its parts for purposes other than those for which it was intended. Do not make any modifications or changes to air compressor or its individual components. Any modifications and changes are made by the customer under his sole responsibility and will void the warranty.

6. Maintenance.

Keep the compressor clean. Disconnect the compressor from the power supply before cleaning. Cleaning should be done at least once a month or more frequently if necessary. Particular attention should be paid to the cleanliness of the muffler filter and the exhaust filter, because their contamination may adversely affect the flow rate and shorten the life of the compressor pump.

Before starting any maintenance work, disconnect the compressor from the power supply and release the compressed air from compressor tank. Before performing any maintenance and inspection work, make sure that the pressure in the tank or in any other element does not exceed 0 bar relative pressure.

Do not clean the compressor with flammable liquids, solvents or with a stream of water. The compressor housing and the elements located on it should be cleaned with a dry, soft cloth. If any dirt gets into the housing, it can be removed with compressed air. The pressure tank can be cleaned from the outside with a damp cloth and mild detergent. The pressure regulator, pressure reducer and manometers should be cleaned with a soft, dry cloth.

Pressure tests of the tank should be carried out every two years. In the event of a negative test result, exclude the tank from use immediately. The condition of the tank surface should be constantly monitored and in the event of any changes, scratches, signs of rust, uneven surfaces or other disturbing signs, stop using the tank immediately.

Remove all fluids from inside the tank at least once a day. Remember that when emptying the tank, the valve outlet should point downwards. Allow all the moisture to escape from the tank, and only then close the valve (place the valve handle perpendicular to the valve).

Every 500 operating hours, clean the air valve and replace the muffler filter. Every 1500 operating hours, replace the piston rings on the compressor piston pump. The air filter should be replaced or cleaned regularly. Cleaning these elements is necessary when high humidity is observed in the blown air.

In the event of high vibrations of the compressor, tighten the feet and mounting screws and make sure that compressor stands on a stable and even surface.

A. Cleaning the exhaust air filter.

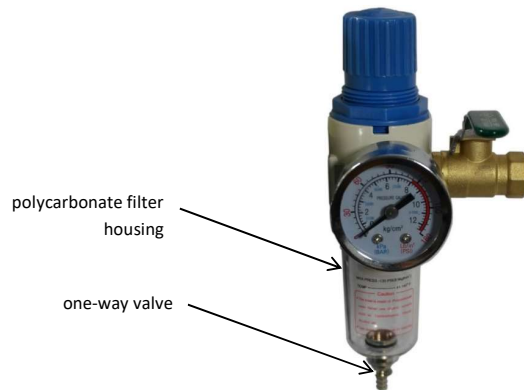


Photo 3: Exhaust air filter - housing components.

Water and fine dirt accumulate inside the exhaust air filter polycarbonate housing (Photo 3). This is the result of air compression and effective filtration. Regularly, at least once a day, after finishing work, clean the filter of the accumulated moisture. To remove moisture from the exhaust air filter housing, press the one-way valve on the filter housing with your finger, make sure that all water is blown out. In order to get rid of the solid contaminants accumulated in the filter housing, unscrew the

transparent part of the housing and pour out the contaminants.

If necessary, you can wash the polycarbonate part of the filter housing with water and a mild detergent (dishwashing liquid). Do not use organic solvents such as trichlorethylene or alcohol-based solvents for cleaning. After thoroughly drying the polycarbonate housing, it can be reinstalled on the filter.

B. Cleaning and replacing the muffler filter.

To replace the muffler filter (Photo 4), unscrew the muffler cover. Then remove the used or dirty filter and install a new one in its place. After replacement, remember to screw the muffler cover back on.

It is acceptable to reuse the filter after it has been thoroughly cleaned. The filter can be cleaned with a brush or a stream of compressed air. However, if the dirt is difficult to remove or the filter is old, it is recommended to replace it with a new one.



Photo 4: Air intake muffler filter mounted in muffler.

C. Safety valve.

In order to keep the safety valve in good condition and to make sure that it is working properly, it should be checked periodically. To do this, gently pull the cotter ring on the valve when the relative pressure in the tank is between 5 and 7 bar. It should open the valve and release the air. Then release the cotter ring and the valve should close again. If the valve does not work as described, it is defective and must be replaced.

7. Warranty.

VacuumChambers.eu guarantees, that the air compressor will be operational and free of defects for a period of 12 months from the date of purchase. In the event of a breakdown during this period, VacuumChambers.eu will repair or replace any damaged compressor element on the terms described in the warranty card included in with the compressor.

This limited warranty does not cover damage to the compressor caused by improper use, maintenance or use not in accordance with this manual. Any use of the device which is not in accordance with the intended purpose given above is forbidden and will void the warranty and the manufacturer's liability for any resulting damage. Any modifications of the device made by the user release the manufacturer from liability for damage and damage caused to the user and the surroundings. Proper use of the device also applies to maintenance, storage, transport and repair.

VacuumChambers.eu is not liable for damages, nor does it cover them under the warranty, for any kind of losses resulting from the breakdown of this product. In the case of a claim, VacuumChambers.eu's sole responsibility is to accept a return or exchange of the product itself.

8. EC declaration of conformity.



DEKLARACJA ZGODNOŚCI WE
EC DECLARATION OF CONFORMITY/ EG-KONFORMITÄTSEKTLÄRUNG

W rozumieniu dyrektywy 2006/42/WE, załącznik II, 1. A/
As defined in the directive, 2006/42/EC annex II, 1.A/ Im Sinne der Richtlinie 2006/42/EG Anhang II, 1.A

DEKLARACJA ORYGINALNA/ TRANSLATION OF THE ORIGINAL DECLARATION/ ÜBERSETZUNG DER ORIGINALKONFORMITÄTSEKTLÄRUNG

Producent:/ Manufacturer:/ Hersteller:

VacuumChambers.eu
drControl Dawid Roszczenko
Jodłowa 3A/34 16-001 Ignatki-Osiedle
Polska / Poland / Polen

Osoba upoważniona do przygotowania dokumentacji technicznej (nazwisko i adres);/ Person authorised to compile the technical file (name and address);/ Person, die bevollmächtigt ist, die technischen Unterlagen zusammenzustellen (Name und Anschrift):

Dawid Roszczenko, Jodłowa 3A/34 16-001 Ignatki-Osiedle.

Opis i dane identyfikacyjne maszyny:/ Description and identification of the machinery:/ Beschreibung und Identifizierung der Maschine:

Ogólne określenie:/ Generic denomination:/ Allgemeiner Bezeichnung: Kompresor tłokowy/piston compressor / Kolbenkompressor.
Funkcja:/ Function:/ Funktion: sprężanie powietrza/ air compression / Luftkompression.
Nazwa handlowa:/ Commercial name:/ Handelsbezeichnung: Kompresor tłokowy/ piston compressor / Kolbenkompressor

Model:/ Model:/ Modell: AT550
Typ:/ Type:/ Typ: AT550-9L
Numer seryjny:/ Serial number:/ Seriennummer:* 910000

*Numer seryjny określają dwie pierwsze cyfry./ The serial number is determined by the first two digits./ Seriennummer wird durch die ersten zwei Ziffern bestimmt.

Maszyna spełnia wszystkie odpowiednie postanowienia:/ The machinery fulfils all the relevant provisions of:/ Die Maschine entspricht allen einschlägigen Bestimmungen:

DYREKTYWA 2006/42/WE PARLAMENTU EUROPEJSKIEGO I RADY z dnia 17 maja 2006 r.
w sprawie maszyn, zmieniająca dyrektywę 95/16/WE,

DIRECTIVE 2006/42/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 17 May 2006
on machinery, and amending Directive 95/16/EC;

RICHTLINIE 2006/42/EG DES EUROPÄISCHEN PARLAMENTS UND DES RATES vom 17. Mai 2006
über Maschinen und zur Änderung der Richtlinie 95/16/EG,

oraz:/ and:/ und:

DYREKTYWA PARLAMENTU EUROPEJSKIEGO I RADY 2014/30/UE z dnia 26 lutego 2014 r.
w sprawie harmonizacji ustawodawstw państw członkowskich odnoszących się do kompatybilności elektromagnetycznej.

DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014
on the harmonisation of the laws of the Member States relating to electromagnetic compatibility.

RICHTLINIE 2014/30/EU DES EUROPÄISCHEN PARLAMENTS UND DES RATES vom 26. Februar 2014
zur Harmonisierung der Rechtsvorschriften der Mitgliedstaaten über die elektromagnetische Verträglichkeit.

Maszyna spełnia wymagania następujących norm:/ The machinery fulfils the requirements of the harmonised standards:/ Die Maschine entspricht der harmonisierten Normen:

EN ISO 12100:2010, EN 1012-1:2010, EN 60204-1:2018,
EN IEC 61000-6-3:2007 + A1:2011+AC:2012, EN IEC 61000-3-2:2019, EN 61000-3-3:2013 + A1:2019.

drControl Dawid Roszczenko
ul. Jodłowa 3A/34, 16-001 Ignatki-Osiedle
tel. 502-105-270
NIP 5432080994 REGON 200849597
www.drcontrol.pl

Białystok, 01.04.2022
(miejsce i data wydania)
(place and date of issue)
(Ort und Datum der Ausstellung)

Dawid Roszczenko
(osoba upoważniona do sporządzenia deklaracji)
(the person empowered to draw up the declaration)
(die zur Ausstellung dieser Erklärung bevollmächtigte Person)

podpis
signature
Unterschrift